

please unscrew B screws from cushion before assembly.

MODEL : 8909


(1)x1	(2)x1	(3)x1 (L)x1 (R)
Back	Seat	Right & Left Frame
(4)x1	(5)x1	
Back Bar	Front Bar	

(A)x4		M6*80 FRAME SCREW
(B)x4		M6*25 BACK BAR SCREW
(C)x2		M6*20 SEAT SCREW
(D)x2		M6*55 ARM SCREW
(E)x6		WOOD CAP

1	2
3	4

NOTE: Before insert all 6 (E) wood caps to screw holes:
 1. Lightly tighten the screws indicate on step 1.
 2. Tighten ALL 6 screws on step 4, then insert ALL 6 (D) wood caps to finish.

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

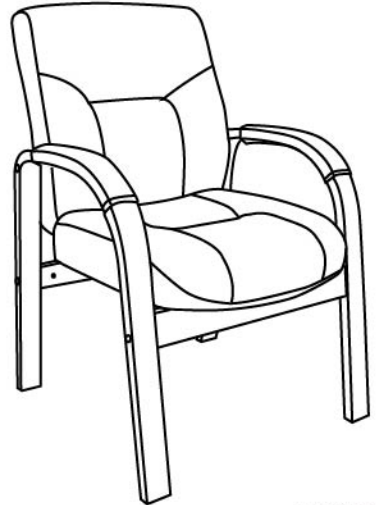

04/09

please unscrew B screws from cushion before assembly.

MODEL: B8909N

(1)x1	(2)x1	(3)x1
Back	Seat	WF031-FB Front Bar
(4)x1	(5)x1 (L)	(5)x1 (R)
WF031-BB Back Bar	WF031-RF Wood Frame-Right	WF031-LF Wood Frame-Left

- (A)x2 M6*80 Front Frame
- (B)x4 M6*25 L-bar
- (C)x2 M6*20 Front Bar
- (D)x2 M6*35 Back Frame
- (E)x6 Insert Caps
- (F)x2 M6*65 Back Frame

1	2	5
Note: Lightly tighten all screws.		NOTE: Before insert all 6 (E) wood caps to screw holes: 1. Tighten ALL 6 screws on step 4, then insert ALL 6 (D) wood caps to finish.
3	4	

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.



12/10